


USER'S GUIDE

The integrated thermostats in the soles will be activated after turning the switch to the "ON" position. The heating mode will automatically be activated after the temperature drops below 78.8°F (26°C) and will be de-activated again when the temperature reaches 98°F (37°C).

The maximum heating time, depending on the outside temperature and quality of your shoes or boots is approximately 8 hours.

Remove the Thermo Soles after each use and turn "OFF" the power. Recharge the soles before your next use.

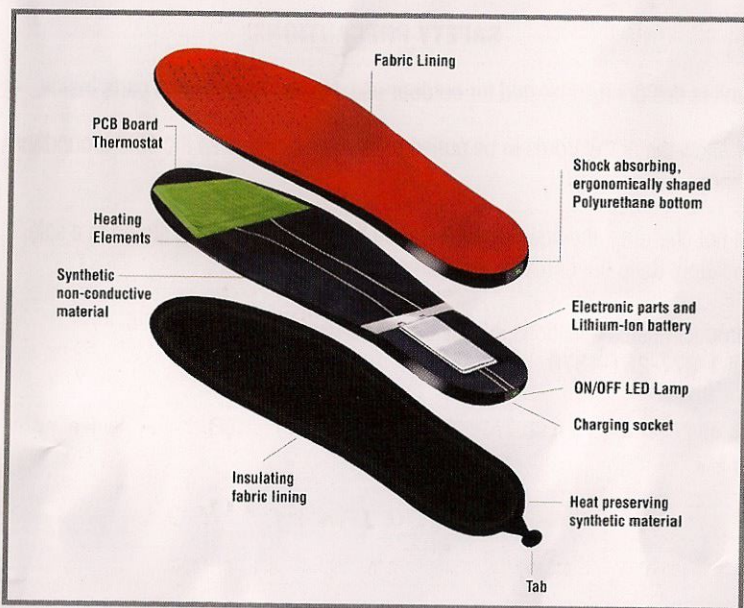

Technical Specifications:

- Lithium-Ion Battery (880mAh, no memory)
- Initial charge time: 8-10 hours, 2 hours thereafter
- Charge hold: 6-8 hours
- Sole temperature range: 78.8F-98.6F (26-37°C)

Care Instructions:

- Turn off when not in use, store in pouch and keep in a dry cool area
- If necessary, wipe clean sole area with damp cloth and air-dry only
- Do not immerse in water, do not use as regular insoles, do not use any liquid or soap
- Let dry before using again, do not bend the soles
- Use only the adapter provided, switch must be at off position at all times when charging

IMPORTANT: When cutting to size, follow the guide lines, going beyond it will cause damage to the heating elements. See warning statement on the soles.



Thank you for your Thermo Soles purchase, the world's first wire-free rechargeable heated insoles. With proper care, it will bring you many years of use during the cold seasons. Ideal for use with ski boots, work boots and outdoor footwear.

It is designed to keep your feet at normal body temperature (98.6F). It may not feel warm to the touch but it will keep your feet comfortable during cold weather.

Instructions For Use

Unpack the Thermo Soles and adapter, along with the separate adapter cable.

The Thermo Soles are not charged and must be fully charged for 8 hours before the first use. The ON/ OFF switch, located on the back side of the soles is protected by a soft plastic cap. Unplug the cap and set the ON/ OFF switch to the left "OFF" position (towards the direction of the socket). If switched to "ON" position, a RED light will appear next to the switch and the soles will not be charged.

Connect the two adapter cables first. Plug in the end of the adapter cables to both of the Thermo Soles socks and then plug in the adapter to charge the soles. Both Soles must always be charged at the same time.

After the initial charge, regular charging is approximately 2 hours. The LED light on the adapter turns to red during loading and then to green after loading is completed. After the soles are fully charged, unplug the adapter and the soles. The Thermo Soles are now ready to be used.

The high-quality 880mAh LI-ION batteries (no memory effect) cannot be damaged by frequent charging and can be re-charged approximately 500 times.

When using the Thermo Soles, turn both switches to the right "ON" position before inserting the soles into your shoes. A red light will indicate the soles are "ON". Put back the protective cap by first inserting into the charging plug to the left. Then cover the ON/ OFF switch on the right.

If needed, remove any existing insoles from your shoes or boots in order to guarantee a perfect fit for your Thermo Soles. The tabs at the end of the soles will protect the plug and ON/ OFF switch and also will help you to easily remove the soles again from your shoes or boots after use.